

ANALYTIC SYSTEMS

Power Conversion Solutions

INSTALLATION & OPERATION MANUAL

VTC120 SERIES VOLTAGE CONVERTER



An ISO9001 Registered Company Battery Chargers • Inverters • Power Supplies • Voltage Converters

8128 River Way, Delta B.C. V4G 1K5 Canada T. 604.946.9981 F. 604.946.9983 TF. 800.668.3884 (US/CANADA)

www.AnalyticSystems.com



VOLTAGE CONVERTER

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS — This manual contains important safety and operating instructions for the voltage converter.

VOLTAGE CONVERTER PRECAUTIONS

1. Do not expose the voltage converter to rain or snow unless it is a sealed model.
2. Use of an attachment not recommended or sold by the manufacturer may result in a risk of fire, electric shock, or injury to persons.
3. Do not disassemble the voltage converter. If service or repair is required, return it to the manufacturer or an authorized service center. Incorrect reassembly may result in a risk of fire or electric shock. Voltages up to 350 volts are present inside the voltage converter any time it is connected to input power source, even if it is switched OFF.
4. To reduce risk of electric shock, disconnect the voltage converter from the input power before attempting any maintenance or cleaning. Switching the voltage converter to OFF will not reduce this risk.
5. Never place the voltage converter directly above a battery; gases from the battery will corrode and damage the voltage converter.
6. Never allow battery acid to drip onto the voltage converter.

MEDICAL EQUIPMENT NOTICE

Analytic Systems does not recommend the use of their products in life support applications where failure or malfunction of this product can be reasonable expected to cause the failure of the life support device or to significantly affect its safety or effectiveness. Analytic Systems does not recommend the use of its products in direct patient care.

Examples of devices considered to be life support devices are: neonatal oxygen analyzers, nerve stimulators (whether used for anesthesia, pain relief, or other purposes), auto-transfusion devices, blood pumps, defibrillators, arrhythmia detectors and alarms, pacemakers, hemodialysis systems, peritoneal systems, neonatal ventilator incubators, ventilators for both adults and infants, anesthesia ventilators, and infusion pumps as well as any other devices designated as "critical" by the U.S. FDA.



TABLE OF CONTENTS

- Front Cover
- Product Warnings and Advisories
- Table of Contents
- Introduction
- Main Parts
- Box Contents
- Installation
- Operation
- Troubleshooting
- Specifications
- Warranty



ANALYTIC SYSTEMS
Power Conversion Solutions

Copyright (2005-2019) Analytic Systems Ware (1993) Ltd.

Revised - April 18, 2019



Introduction

The VTC120 Series Voltage Converter is a variable duty cycle switching voltage converter with a precision linear regulator output. It can be configured to run from a 12 VDC or 24 VDC input battery voltage to provide output voltages of 12 VDC, 24 VDC, or 48 VDC. All VTC120 series models are fully isolated from the input (up to 500 VDC).

Applications of this unit include:

- Running 24V PLC controls from a 12 Volt battery system.
- Any application requiring 24 VDC when only 12 VDC is available.
- Providing ground isolation between two 12 VDC or 24 VDC power systems, or between a 12 VDC and 24 VDC power system.

In addition to the VTC120 series, Analytic Systems also manufactures the VTC120h series, a high power output version of the standard model. These models supply a higher output current than the standard models (7.5 A Continuous/ 8 Amp Peak) and are built with appropriate fuses for the higher current.

Box Contents

The box that you've received should contain:

- One VTC120 DC/DC Voltage Converter
- This User Guide (a .PDF copy can be downloaded from www.AnalyticSystems.com)
- One Warranty Registration Card

If anything is damaged or missing from your box, please contact us by e-mailing Sales@AnalyticSystems.com



Main Parts



Front Panel

- | | |
|--|--|
| <ol style="list-style-type: none">1. DC Output Connection: 4-pin Phoenix Connector (Pins 1 and 2)2. Output Power LED | <ol style="list-style-type: none">3. DC Input Connection: 4-pin Phoenix Connector (Pins 3 and 4)4. Input Power LED5. Power Switch |
|--|--|



Installation

MOUNTING

Mount the unit in a DRY and WELL VENTILATED location. Allow at least 1 inch of clearance around the unit for adequate cooling.

POWER CONNECTION

This unit is equipped with a 4-pin Phoenix connector to serve as both an input and output connection. The polarity of this connection can be found on top panel label.

Pin	Polarity
1	Input Positive
2	Input Negative
3	Output Negative
4	Output Positive

IMPORTANT: The wire gauge used for the input/output connections is of a suitable gauge for the input current rating and output current rating, respectively. See *Specifications* for more details.

Max. Output Current	24.00 A	15.00 A	9.30 A	5.90 A	3.70 A
American Wire Gauge	#8AWG	#10AWG	#12AWG	#14AWG	#16AWG

Max. Output Current	2.30 A	1.50 A	0.92 A	0.58 A	0.23 A
American Wire Gauge	#18AWG	#20AWG	#22AWG	#24AWG	#28AWG

IMPORTANT: Ensure that the total average load of all devices connected to the output does not exceed the continuous current rating of the unit. If multiple devices are connected to the output of the voltage converter, they must share a common ground! See *Specifications* for more details.



Operation

This VTC120 is designed for simple and intuitive operation. Before using the voltage converter, it must be properly installed and connected to the load and power source. For more information, see *Installation*.

TO START OPERATION

1. Move the Power Switch to the ON position.
2. The INPUT LED and OUTPUT LED will both glow green indicating that the circuitry is energized.
3. The voltage converter will automatically begin supplying the voltage listed on the label to any connected devices.

TO END OPERATION

1. Move the Power Switch to the OFF position.
2. Wait for the INPUT LED and OUTPUT LED to stop glowing.
3. Once the LEDs is dim, it is safe to disconnect the power source and load from the voltage converter. The unit is ready for storage or service.



Troubleshooting

The table below details malfunctions that voltage converter may experience during installation or operation, the cause of those malfunctions, and the suggested course of action correcting them.

Issue: The unit is not supplying the listed output voltage	
Cause:	If the current being drawn by the connected devices exceeds the unit's peak output current rating for too long of a time, the unit will drop the output voltage to try and maintain the current at its maximum level.
Fix:	Check the output current with a multimeter. If the unit is overloaded, reduce the load by disconnecting some devices from the voltage converter.
Issue: The input fuse blows with the unit is turned ON	
Cause:	The power source is likely connected in the reverse polarity.
Fix:	Check the polarity of the input connection and correct it if reversed. If this connection is correct, the cause of the blown fuse is an internal component failure and the unit must be returned for service.
Issue: The input LED does not turn glow when the power source is connected	
Cause:	The unit is not detecting the minimum input voltage required for normal operation.
Fix:	Check that the input power source is supplying the rated voltage using a multimeter. Check that the input connection is not damaged or discontinuous. If there are no problems with the power source or input connection, the cause of the failure is an internal component failure and the unit must be returned for service.



Specifications

12 Volt Input Models

Model	VTC120-12-12	VTC120-12-24	VTC120-12-48
Input Voltage	11 – 15 VDC		
Maximum Input Amps	8.5 A	15 A	30 A
Input Fuse	AGC-10	AGC-20	AGC-30
Output Voltage	12.0 VDC	24.0 VDC	48.0 VDC
Output Amps	5 Continuous / 5.5 Peak		

24 Volt Input Models

Model	VTC120-24-12	VTC120-24-24	VTC120-24-48
Input Voltage	22 – 30 VDC		
Maximum Input Amps	3.8 A	7.5 A	15 A
Input Fuse	MDA-6	AGC-10	AGC-20
Output Voltage	12.0 VDC	24.0 VDC	48.0 VDC
Output Amps	5 Continuous / 5.5 Peak		

48 Volt Input Models

Model	VTC120-48-12	VTC120-48-24	VTC120-48-48
Input Voltage	40 – 60 VDC		
Maximum Input Amps	2.1 A	4.2 A	8.4 A
Input Fuse	MDA-5	MDA-5	AGC-10
Output Voltage	12.0 VDC	24.0 VDC	48.0 VDC
Output Amps	5 Continuous / 5.5 Peak	5 Continuous / 5.5 Peak	2.5 Cont. / 5.5Peak

Mechanical

Length	5.3 in / 13.5 cm
Width	7.9 in/ 20.1 cm
Height	2.4 in / 6.1 cm
Clearance	1.0 in / 2.5 cm all around
Weight	3.0 lb / 1.36 kg
Material and Finish	Marine Grade Black Anodized Aluminum
Fasteners	18-8 Stainless Steel
Connections	Input/ Output - 4-pin Phoenix Connector
Isolation	> 500 VDC (Input-Output)



High Output						
Model (VTC120X)	h-12-12	h-12-24	h-24-12	ih-24-24	ih-48-12	ih-48-24
Input Volts (DC)	11 – 15	11 – 15	22 – 30	22 – 30	40 – 60	40 – 60
Input Amps (max)	11	21.8	6.2	10.9	3.0	
Input Fuse	AGC-15	AGC-25	MDA-7	AGC-15	MDA-7	AGC-15
Output Volts (DC)	12.0	24.0	12.0	24.0	12.0	24.0
Output Amps	7.5 Continuous / 8.0 Peak					
Isolation Input-Output	> 500 VDC					

Environmental and Safety	
Operating Temperature Range	-25°C to +40°C @ maximum output. Derate Linearly 2.5% per °C from 40°C (Optional -40°C extra wide temperature operation available)
Humidity	0 - 95% Relative Humidity (non-condensing) with standard conformal coating
Audible Noise	0 dB
Typical Service Life	> 10 years (87,600 hrs)
Warranty	Three years parts and labor
Safety	Built to meet CSA 22.2.107.1 & UL458

*Specifications subject to change without notice.

Designed and manufactured by: **ANALYTIC SYSTEMS WARE (1993) LTD.**

8128 River Way
Delta, BC V4G 1K5 Canada
www.analyticsystems.com

p. 604.946.9981 f. 604.946.9983
tf. 800.668.3884 US/Canada
info@analyticsystems.com



Limited Warranty

1. The equipment manufactured by Analytic Systems Ware (1993) Ltd. (the “Warrantor”) is warranted to be free from defects in workmanship and materials under normal use and service.
2. This warranty is in effect for:
 - a. 3 Years from date of purchase by the end user for standard products offered in our catalog.
 - b. 2 Years from date of manufacture for non-standard or OEM products
 - c. 1 Year from date of manufacture for encapsulated products.
3. Analytic Systems will determine eligibility for warranty from the date of purchase shown on the warranty card when returned within 30 days, or
 - a. The date of shipment by Analytic Systems, or
 - b. The date of manufacture coded in the serial number, or
 - c. From a copy of the original purchase receipt showing the date of purchase by the user.
4. In case any part of the equipment proves to be defective, the Purchaser should do the following:
 - a. Prepare a written statement of the nature of the defect to the best of the Purchasers knowledge, and include the date of purchase, the place of purchase, and the Purchasers name, address and telephone number.
 - b. Call Analytic Systems at 800-668-3884 or 604-946-9981 and request a return material authorization number (RMA).
 - c. Return the defective part or unit along with the statement at the Purchasers expense to the Warrantor; Analytic Systems Ware (1993) Ltd., 8128 River Way, Delta, B.C., V4G 1K5, Canada.
5. If upon the Warrantor’s examination the defect proves to be the result of defective material or workmanship, the equipment will be repaired or replaced at the Warrantor’s option without charge, and returned to the Purchaser at the Warrantor’s expense by the most economical means. Requests for a different method of return or special handling will incur additional charges and are the responsibility of the Purchaser.
6. Analytic Systems reserves the right to void the warranty if:
 - a. Labels, identification marks or serial numbers are removed or altered in any way.
 - b. Our invoice is unpaid.
 - c. The defect is the result of misuse, neglect, improper installation, environmental conditions, non-authorized repair, alteration or accident.
7. No refund of the purchase price will be granted to the Purchaser, unless the Warrantor is unable to remedy the defect after having a reasonable number of opportunities to do so.
8. Only the Warrantor shall perform warranty service. Any attempt to remedy the defect by anyone else shall render this warranty void.
9. There shall be no warranty for defects or damages caused by faulty installation or hook-up, abuse or misuse of the equipment including exposure to excessive heat, salt or fresh water spray, or water immersion except for equipment specifically stated to be waterproof.
10. No other express warranty is hereby given and there are no warranties that extend beyond those described herein. This warranty is expressly in lieu of any other expressed or implied warranties, including any implied warranty of merchantability, fitness for the ordinary purposes for which such goods are used, or fitness for a particular purpose, or any other obligations on the part of the Warrantor or its employees and representatives.
11. There shall be no responsibility or liability whatsoever on the part of the Warrantor or its employees and representatives for injury to any person or persons, or damage to property, or loss of income or profit, or any other consequential or resulting damage which may be claimed to have been incurred through the use or sale of the equipment, including any possible failure of malfunction of the equipment, or part thereof.
12. The Warrantor assumes no liability for incidental or consequential damages of any kind




DESIGNED AND MANUFACTURED BY



ANALYTIC SYSTEMS
Power Conversion Solutions

Battery Chargers • Inverters • Power Supplies • Voltage Converters

 800-668-3884

 604-946-9983

 sales@analyticsystems.com

 www.AnalyticSystems.com

 8128 River Way
Delta, BC V4G 1K5 | Canada

Register Products Online | www.analyticsystems.com/support/warranty-registration